



POLE SUPPORTED
TECHNOLOGY



The paltry weight and minimal pack size makes the Hunker™ 2P perfect for a day hike where unexpected weather can roll in, or you can add it to your backpacking kit and pitch it as an open air shelter, gear shed or shade space. Versatile, packable and easy to set up as a pyramid or lean to, you can also connect Hunker™ to your primary tent to extend the usable square footage.

HUNKER™ HIGHLIGHTS

Hunker™ can be setup in two configurations: either as a lean to using a tree or in a pyramidal shape.

For extra protection from the elements deploy the rain flap.

MIN WEIGHT

 
7.5 oz
213 g

PACKED SIZE

6.5 x 3 in dia
17 x 8 cm dia

FLOOR DIM

81 x 80 in
211 x 209 cm

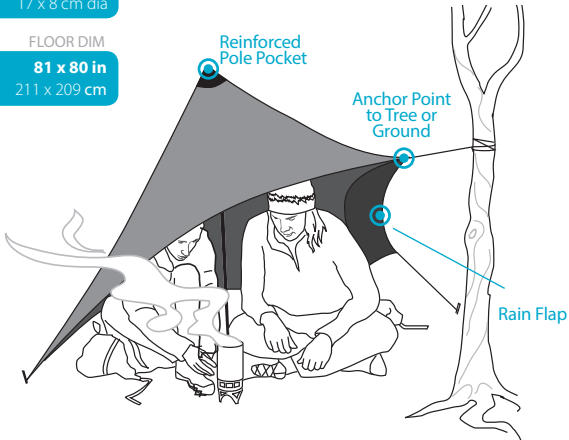


HUNKER™ 2P


2 PERSON



 
LEAN TO SETUP

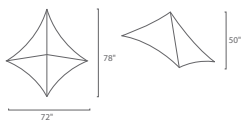

PYRAMID SETUP

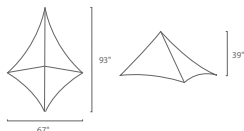 


Minimum Weight	7.5 oz / 213 g
Packaged Weight	7.7 oz / 218 g
Packed Size	6.5 x 3 in dia / 17 x 8 cm dia
Floor Dimensions	81 x 80 in / 211 x 209 cm
Interior Height	36 in / 91 cm
Floor Area	24 sq ft / 2.2 sq m
Included Accessories	Drawstring style stuff sack, stakes, and repair kit

 

HUNKER™ SETUP

 
1. Attach anchor point with red webbing to tree at a height of about 30" or stake to ground.




2. Lightly tension and stake out the two side anchors.



 3. Extend trekking pole into center pole pocket until front and side anchors are tensioned.



 4. Secure rear anchor and adjust side anchors if needed.




5. Stake anchor on gray rain flay for additional coverage (optional). Roll up and secure with snap if not needed.





INSTRUCTIONS FOR SETUP

 To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301



1 Connect Front Anchor

  Depending on your configuration, either connect the front (red) anchor to a tree about 30" high or stake it directly to the ground.

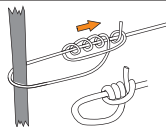


2 Stake Side Anchors

Loosely tension both side anchors to make a triangle of fabric, and stake in place. Make sure not to over-tension these corners—more tension can be added at the end of setup.



3 Insert Trekking Pole

 Slide the handle of the trekking pole into the reinforced pocket at the top of Hunker™ 2P. Extend the trekking pole until the front two panels are completely tensioned.




4 Stake Rear Anchor

Stake the rear anchor creating a full volume shelter and adjust cord at all anchors so there is even tension over the entire Hunker™ 2P.



5 Deploy Rain Flap

 For extra rain and wind protection, stake the guy line for the grey Rain Flap. When not in use, you can save a stake point and stow the Rain Flap with snap closure.

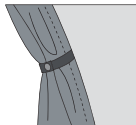

©2013 NEMO Equipment, Inc.



Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

HUNKER™ 2P