



# HYPNO PQ/EX

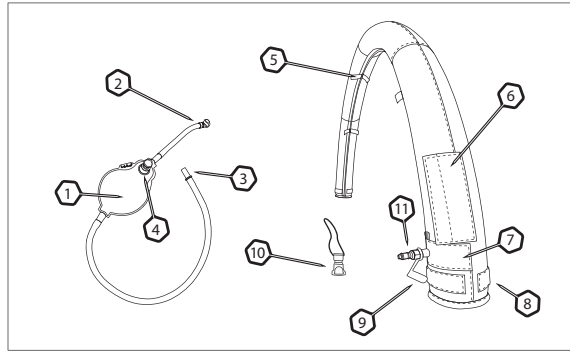

©2006 NEMO Equipment, Inc.

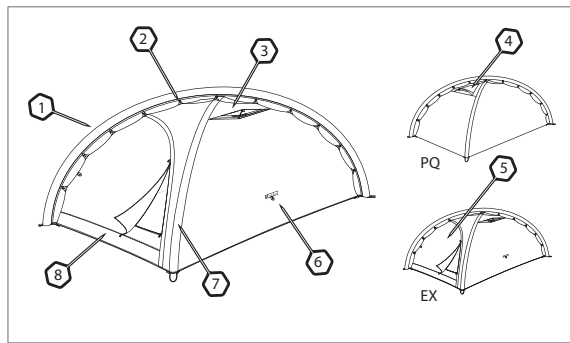

## Hypno

## OVERVIEW

1. Removable External Airbeam
2. Airbeam Attachment Straps with Tri-glides
3. Internally Deployable Strutted Vent (Hypno EX)
4. Rear Scoop Style Vent (Hypno PQ)
5. Rear Storm Door™ Entry/Strutted Vent (Hypno EX)
6. Guy-out
7. Removable Internal Airbeam
8. Front Storm Door™ Entry/Strutted Vent





## Integrated Pump and Airbeam

1. Integrated Pump Body
2. Quick-Disconnect Fitting
3. Mouthpiece
4. Universal Inflation Port / Moisture Release Valve
5. Velcro Straps for Attachment Inside Tent Shell
6. Bladder Access Pocket
7. Hypalon® Valve Reinforcement
8. Velcro Panels for Securing Airbeam Ends
9. Protective Cap for Valve
10. Deflator
11. Quick-Disconnect Inflate/Deflate Valve

www.nemoequipment.com





NEMO EQUIPMENT  
100 Factory Street, Nashua, NH 03060  
Phone/Fax: 1-800-997-9301/ 603-881-9358  
E-mail: journey@nemoequipment.com

\*Patents Pending

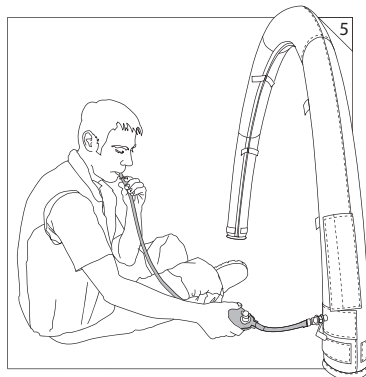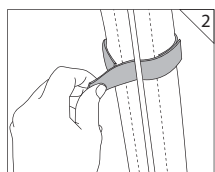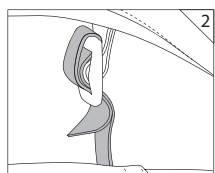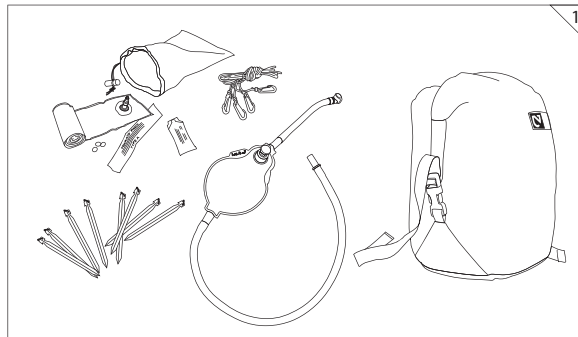


## SET UP

- 1 **Before you head out into the wilderness:** Lay out the contents of Hypno and make sure you received your tent and the following items: stuff sack, Integrated Pump, replacement bladder with inflate/deflate valve, 4 stakes (6 stakes with EX), guy-out lines, and repair kit.
- 2 The first time you set up Hypno, you will need to attach the airbeams to the tent. Loop the webbing straps on the outside of the tent through the airbeam tri-glides as shown left, and inflate. Connect the inner airbeam by matching up the Velcro straps once the airbeam has been inflated. Remember the inflation valves should be at the front of the tent. **Keep your airbeams attached to save setup time in the future.**
- 3 In a flat area, begin the setup of your tent by staking it out. This way you have the option of inflating the tent from the inside. This is a unique advantage of NEMO AirSupported™ tents.
- 4 Connect your pump to the outer airbeam. When properly connected, the quick-disconnect fittings will make an audible click. Inflate, and repeat the process with the inner airbeam. When inflating from outside the tent, you can pass the end of the pump through the pump access zipper. This is especially useful if you are using a Nemoid™ foot pump.
- 5 To use the Integrated Pump, first make sure the universal inflation port is closed, then blow into the pump and squeeze it with your hand or under your foot. Repeat this sequence, being sure to frequently inhale.

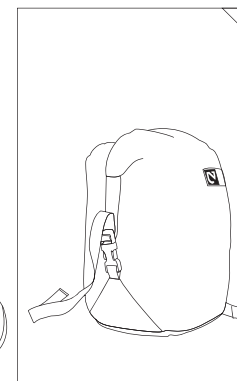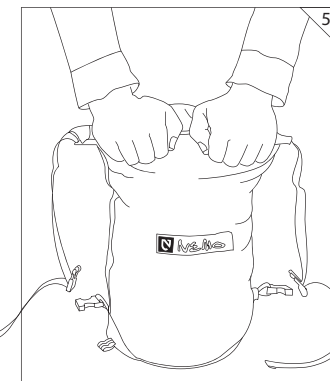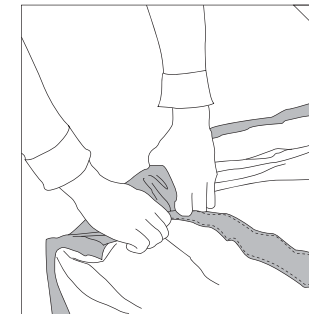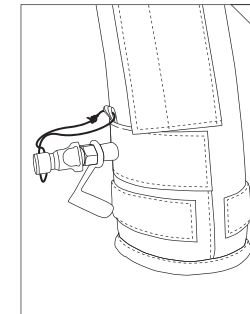


## TAKE DOWN


- 1 To take Hypno down, first remove all gear and as much moisture as possible. Water will add weight to your pack and can lead to mildew.
- 2 Begin by placing the deflator on the inflate/deflate valve. When properly connected, there will be an audible click. As pressure is released, the airbeam will immediately deflate.
- 3 Roll the tent along the airbeams towards the valves to force out all the air. Try to clean as much dirt and debris from your tent as possible before packing it. This will help preserve the breathability of the tent fabrics and reduce overall wear and tear.
- 4 Stuff the tent entirely into the stuff sack. It helps to leave Hypno's doors open in order to let trapped air out during this process.
- 5 Fold the top edge of the stuff sack down several times to make an airtight seal. Allow excess air to escape while compressing. Secure the stuff sack with the compression straps on both sides.
- 6 Remember to leave no trace. Before leaving your campsite take a thorough look around making sure you have not left anything behind, out of place, or damaged.

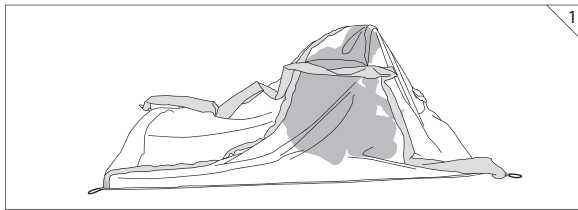


1 In poor weather, Hypno can be inflated entirely from the inside. After staking out the corners, get inside and take your time pumping up the airbeams while staying dry. Remember to close all zippers to stay completely dry.

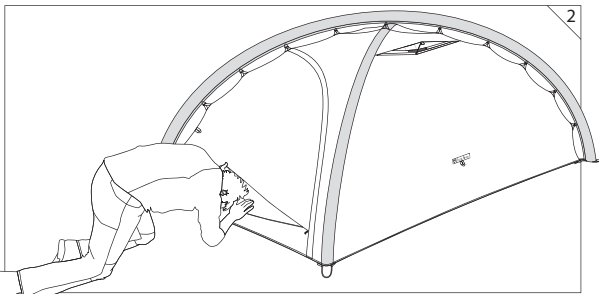


2 The Storm Door™ entry on either side of the tent (front door on Hypno PQ) allows quick entry and exit while protecting your dry interior from the elements outside. Unzip only the bottom zipper to crawl into your tent without exposing the inside. The Storm Door™ also doubles as a strutted vent for extra ventilation.

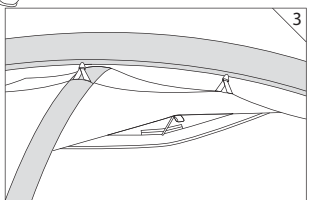


3 Hypno EX has two internally deployable vents, as well as two large mesh doors for added control of air circulation. From the outside, unvelcro the vent edges and position the strut by connecting its end to the Velcro on the tent. If the weather is bad, the vent can be opened or closed through the access zippers in the mesh inside of the vent.

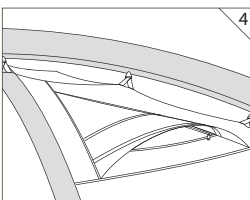


4 Hypno PQ has a rear scoop vent in addition to the large front mesh door. This will create an upward draft for maximum airflow.

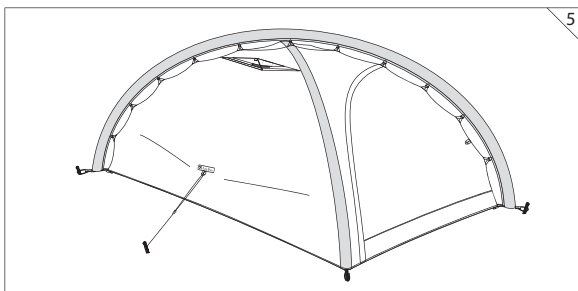


5 Hypno is designed to be a free-standing tent which allows a greater flexibility in choosing campsites. If you are only setting up camp for an hour during an adventure race or want to sleep on top of the rock outcrop, Hypno's crossed airbeam design allows the tent to be set up without staking it down. However, in inclement weather, Hypno provides multiple anchor points as well as guy-out points for extra stability.

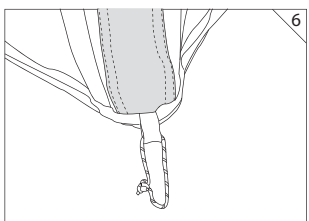

6 Friction created by staking a tent often wears out the anchors before the rest of the tent. In order to improve the life span of the tent, all of Hypno's anchors are easily replaceable. The airbeams are also easily removable and replaceable if something were to damage only an airbeam and not the rest of the tent. See the CARE and FIELD REPAIR section for more information on repairing airbeams.

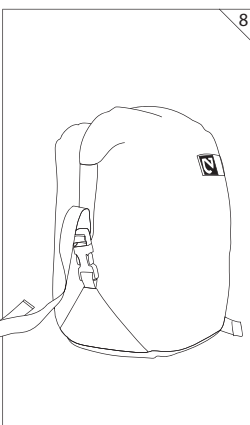

7 Use the hook hanging from the center of the airbeam to clip your head lamp for a convenient overhead light.

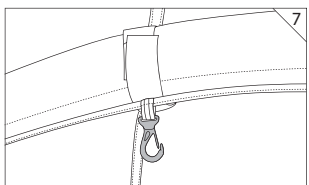

8 Your Hypno stuff sack also works very well as a dry bag for other gear when your tent is not inside. The bag is waterproof and the Dimension-Polyant reinforcement allows you to really pack things in tight.

## FEATURES

## CARE & FIELD REPAIR

### Tips for Extending the Life of Your Tent

- △ Avoid rough ground, especially rocks and pavement.
- △ Make sure the tent is clean and dry before packing.
- △ Store the tent unpacked to allow air circulation.
- △ Occasionally inspect the tent for wear and tear.
- △ Don't store the tent exposed to UV light.
- △ Do not store Nemoid™ Foot Pump compressed.

### Repairing Bladders:


NEMO AirSupported™ tents are designed to withstand all the usual rigors of adventure. We worked hard to select materials with the right balance of being lightweight and durable. If you take reasonable care of your tent, you should never have a problem. But, accidents do happen! If you have a puncture, the next few steps will show you how to swap in a new bladder and repair the damaged one to keep as a spare. Please read all the steps first before beginning.

### Exchanging Bladders

**! Never open access pockets when airbeam is inflated.**

- 1 △ Connect deflator to completely deflate the punctured airbeam.
- 2 △ Open bladder access pockets. If the puncture is reachable, skip to **Repairing Bladder Punctures** for TEAR-AID™ instructions.

- 3 △ To swap in a new bladder, push the valve back through its Hypalon® hole. A small amount of force may be needed. Be careful not to tear the airbeam.
- 4 △ Tie the new bladder to the end of the old bladder. **It is important as you pull the new bladder through that it does not twist.** To minimize twists, it may help to lay out the new bladder flat on the ground with the valve oriented the right direction.
- 5 △ Pull the new bladder through and untie the old bladder.

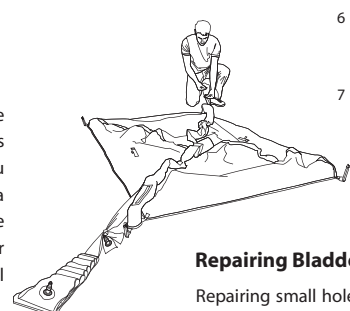

- 6 △ Once the valve is pushed back through its Hypalon® hole and the **access pockets have been closed**, re-inflate.
- 7 △ Any twists in the bladder will result in kinks in the airbeam when you re-inflate. This will require repeating this entire process, so it is best to take your time and be sure the bladder is fed into the tent with the valve oriented in the right direction, without any twists.

### Repairing Bladder Punctures:

Repairing small holes in a NEMO bladder is simple. If necessary, inflate the bladder underwater to locate the puncture.

- 1 △ Make sure the area is dry and clean
- 2 △ Cover the hole with a generous piece of the self-adhesive patch (TEAR-AID™) included in your repair kit.

If the damage is larger than 1/8" in length or diameter, the repair may not be reliable over time. Replacement bladders are available from your NEMO retailer or from [www.nemoequipment.com](http://www.nemoequipment.com).

## REPAIR

If you have any problems with a NEMO product, please contact Rainy Pass Repair, Inc., the industry leader in outdoor product care for repair or replacement. If you have any questions regarding warranty and repair, or if you need to send a product in for service, please call Rainy Pass. It is not necessary to clean the item before sending, but it will be appreciated if you remove any excessive soiling. Rainy Pass will be happy to give you advice about safely cleaning your product. Please provide the following when you send a NEMO product to Rainy Pass:

- △ A note with your name, phone number, address, e-mail and problem description. A repair form can be downloaded at: [www.nemoequipment.com/pdf/NEMO\\_repairform.pdf](http://www.nemoequipment.com/pdf/NEMO_repairform.pdf)
- △ Please remove all of your personal items and mark all damaged areas on the product with masking tape.
- △ Pack the product in a sturdy cardboard box with plenty of room. If possible, use the original box to reduce waste.

Ship to:  
Rainy Pass Repair, Inc.  
5307 Roosevelt Way, NE  
Seattle, WA 98105

To contact Rainy Pass:  
Phone: 1 (888) 747-7867  
Email: [repair@rainypass.com](mailto:repair@rainypass.com)  
[www.rainypass.com](http://www.rainypass.com)

If you live in the Seattle area, you can call Rainy Pass locally at (206) 523-8135 and visit their shop during the following hours: M,T,W,F 9am-6pm and Th 9am-7pm.

## WARRANTY

NEMO guarantees every product we sell. We put a great effort into choosing the best materials and providing you with the highest level of workmanship. If one of our products does not meet your expectations during its useful life, we promise to repair it, replace it, exchange it, or give you a refund at our discretion. NEMO does not warranty products against normal wear and tear, unauthorized modifications or alterations, improper use, improper maintenance, misuse or neglect or if the product is used for a purpose for which it is not intended. Except as expressly set forth in these terms and conditions, NEMO is not liable for any direct, indirect or consequential damages arising out of or resulting from the use of a NEMO product. The warranties set forth in these terms and conditions are in lieu of all other warranties, express or implied, including without limitation, implied warranties of merchantability or fitness for a particular purpose.

### ! WARNINGS

- Keep tent away from open flames or smoldering camp fires
- Maintain adequate ventilation inside tent
- Avoid campsites with danger of falling rocks or tree limbs, lightning strikes, flash floods, avalanches or other hazards
- In extreme weather make sure all stakes and guy-outs are secure
- Do not store food inside of tent
- Store tent in a dark, dry area away from UV light