

PADLOCK™

For MORPHO 2P™




8 9 2 8 0 2 0 0 2 2 7 2

NEMO guarantees every product we sell. We put a great effort into choosing the best materials and providing you with the highest level of workmanship. If one of our products does not meet your expectations during its useful life, we promise to repair it, replace it, exchange it, or give you a refund at our discretion.


To learn more, please visit us at:

www.nemoequipment.com


©2010 NEMO Equipment, Inc. All rights reserved. Made in China.




*Patents Pending

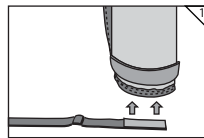

1. To install the Padlock™, take the end of the long strap and sandwich it between the Velcro® loops on the bottom of the long airbeam and the Velcro® hooks near the tent floor. Repeat with the short strap and the short airbeam.

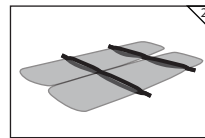

2. Insert your sleeping pads between the two pieces of webbing. Make sure to slide the tri-glides along the webbing so there is a tri-glide on either side of your sleeping pad.

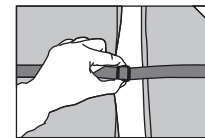

3. Adjust the tri-glides to lock your sleeping pads in the proper place. Enjoy a good night's sleep. Once installed, the Padlock™ can remain in the tent when packed up, or be easily removed when you want to save ounces.